


PTO HYDRAULIC CONVERSION SETUP

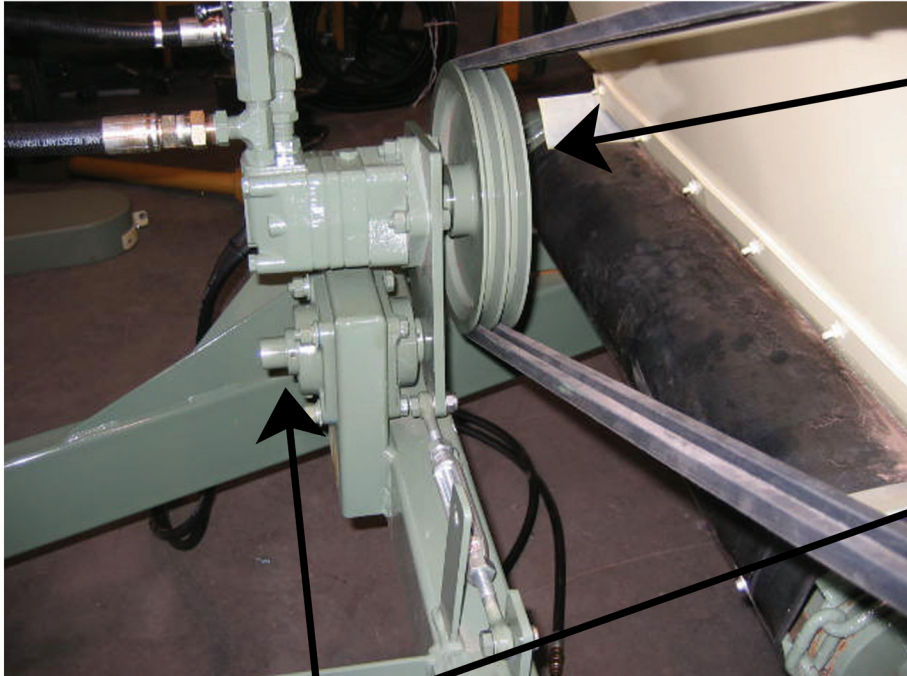

Pulley

Shaft

1) Remove PTO, pulley and shaft from bearing mount, leaving the bearings in position.

2) Mount the new hydraulic drive bracket into position locking it down with the grub screws.

3) Slide the 10x2B on to the hydraulic motor shaft, lining it up with the pulley on the hopper. Once the pulley is in position lock down with grub screws which are located in the pulley.

4) Remove the tension jockey from the angle bracket and bolt the tension shackle supplied as per diagram.

5) Place supplied vee belt into position and tension making sure you do not over tension.



Tension Shackle